

## My lenovo ideapad G50 laptop Problem with laptop keyboard

Posted by lenovoadmin - 06 Jan 2017 08:26

---

Sounds like that your END button is stuck, either physically slighty stuck down or short wired by something that went under the key like a fluid, maybe a squished little bug.

For now your best bet would be to CAREFULLY remove the END key from your keyboard and clean whats under it.

=====