Lenovo Service Center - Lenovo Service Centers Contacts

Generated: 5 November, 2025, 02:52

Wh	does m	y Lenovo	S21e-20 laptop	device turn	on and off	by itself?
Postec	l by lenovoadm	in - 06 Jan 201	7 08:38			•

This problem can be caused by multiple issues. Your device's RAM may be loose and need to be reseated, or it may need to be replaced. If this solution does not help, then your motherboard has failed and needs to be replaced. Please refer to the appropriate replacement guides to resolve this issue.
